


散热器安装说明

组件

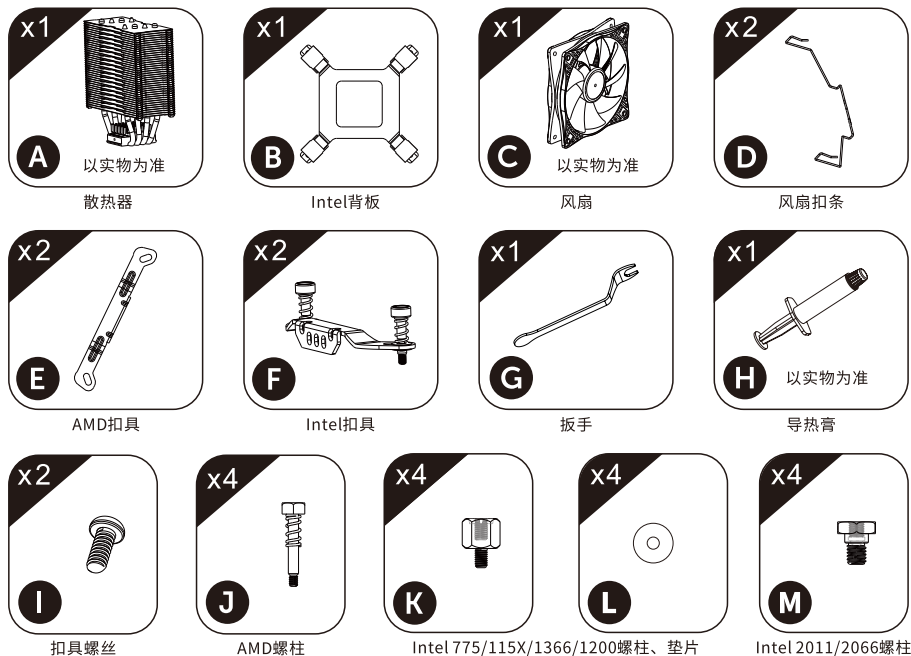



AMD安装步骤

步骤一：将导热膏均匀涂抹在CPU上

步骤二：将散热器安装在主板上：


- 1、安装扣具；
- 2、散热器固定在主板上；
- 3、风扇安装在散热器上；
- 4、检查散热器安装是否稳固。

⚠ 请注意分清CPU平台孔位

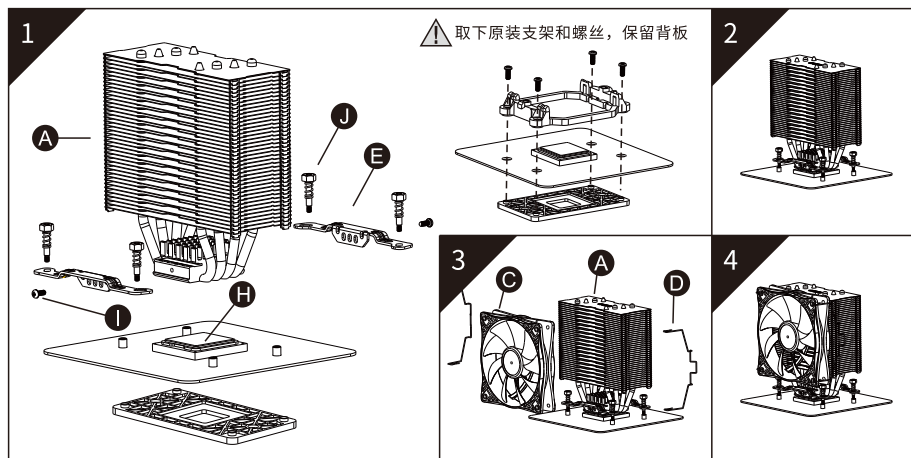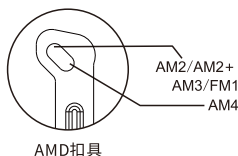

INTEL安装步骤


步骤一：调整扣具螺丝至相应主板平台位置

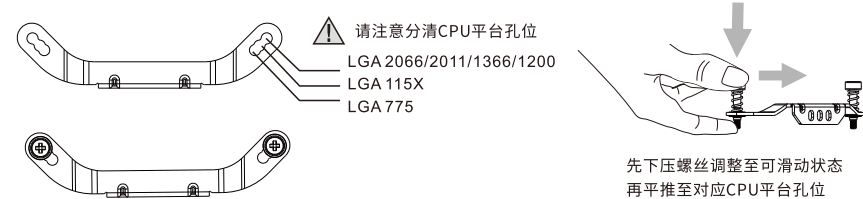


步骤二：将导热膏均匀涂抹在CPU上

步骤三：将散热器安装在主板上：


- 1、安装扣具；
- 2、散热器固定在主板上；
- 3、风扇安装在散热器上；
- 4、检查散热器安装是否稳固。

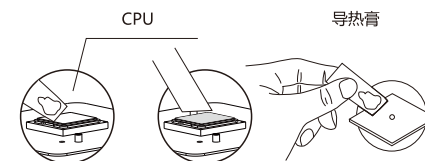


LGA 775/115X/1366/1200 安装示意图

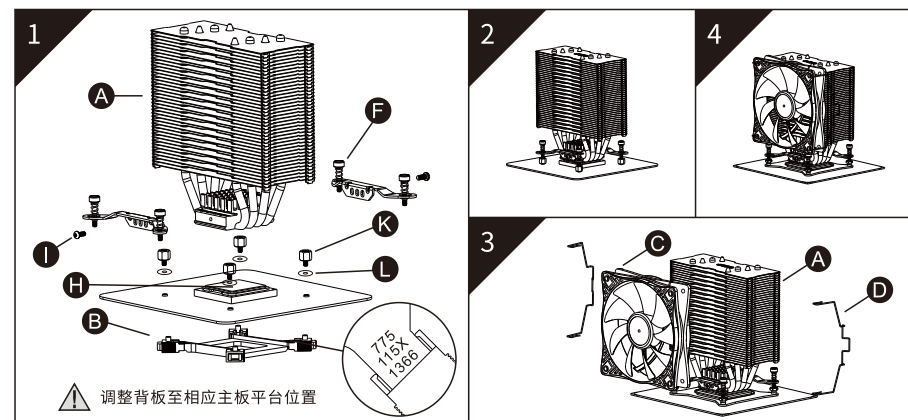

LGA 2011/2066 安装示意图

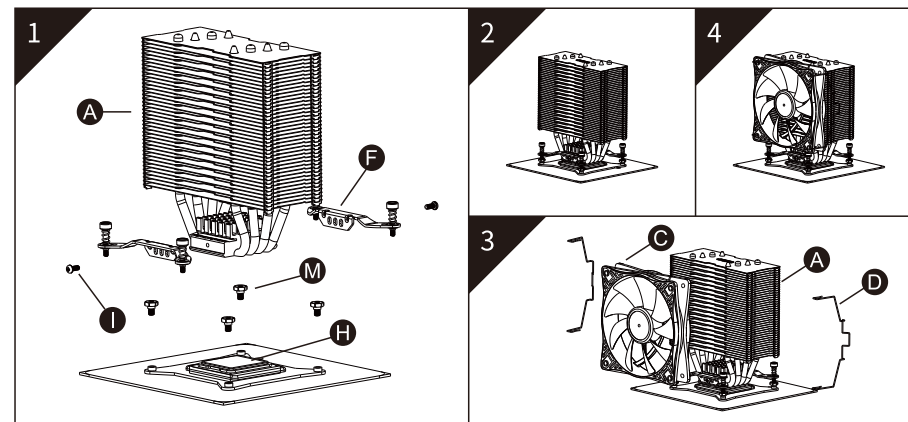

COMPONENTS


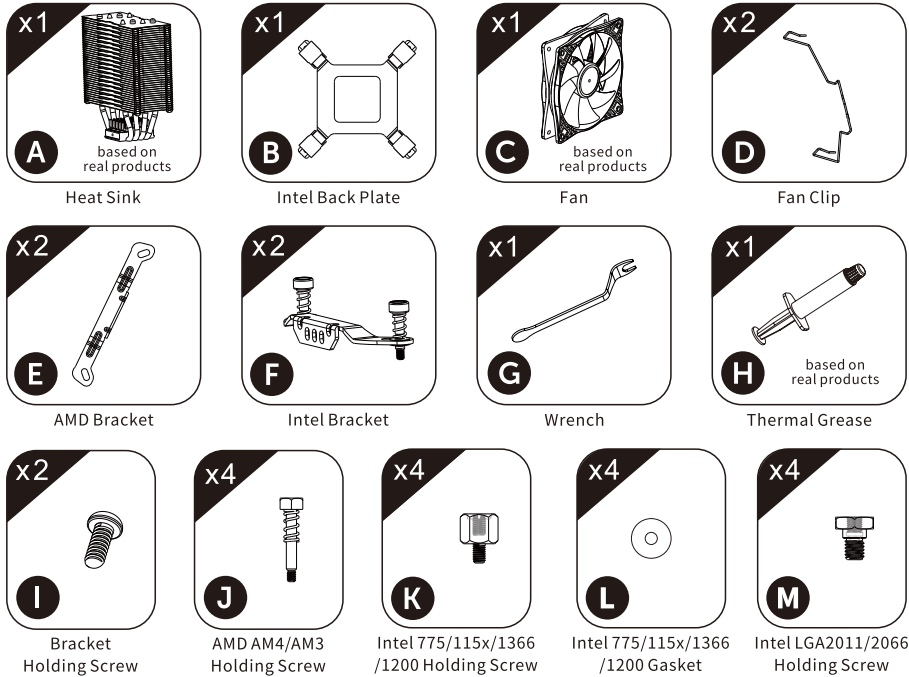


AMD Platform Installation Steps

Step 1: Apply Thermal Grease on CPU evenly

Step 2: Install the Heat Sink on the MB:


- 1.Bracket Setup;
- 2.Install the Heat Sink on the MB tightly;
- 3.Installing the Fan on the Heat Sinks;
- 4.Check whether the Heat Sinks is stable installed.

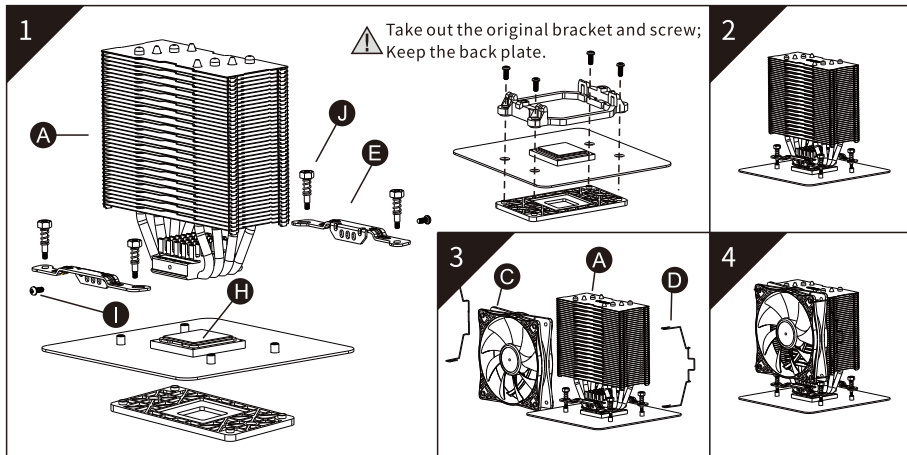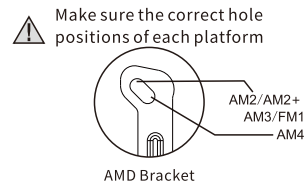

INTEL Platform Installation Steps

Step 1: Adjust the bracket Screws to the Right Positions


⚠ Make sure the correct hole positions of each platform

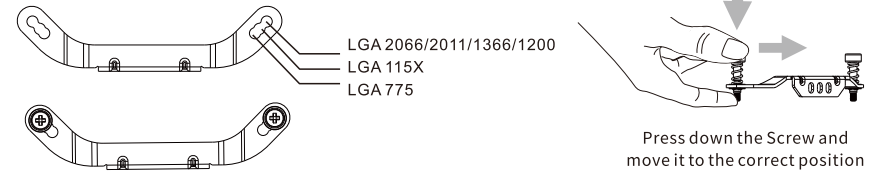


Step 2: Apply Thermal Grease on CPU evenly

Step 3: Install the Heat Sink on the MB:

- 1.Bracket Setup;
- 2.Install the Heat Sink on the MB tightly;
- 3.Installing the Fan on the Heat Sinks;
- 4.Check whether the Heat Sinks is stable installed.

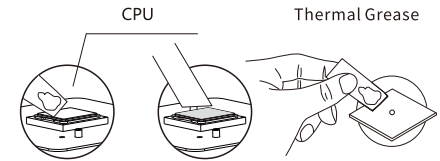

LGA 775/115X/1366/1200 Installation Guide

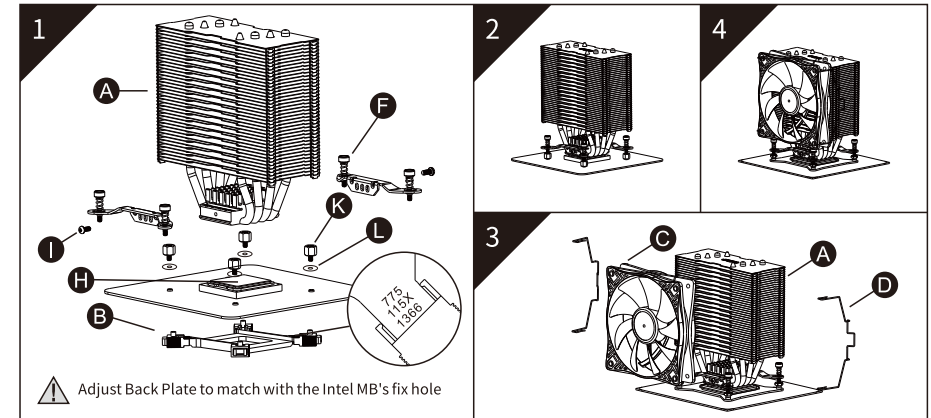

LGA 2011/2066 Installation Guide

